




INSTALLATION INSTRUCTIONS

1. Install RoofEdge® edging prior to LiveRoof® modules.



2. Use a chalk line to mark the green roof perimeter.

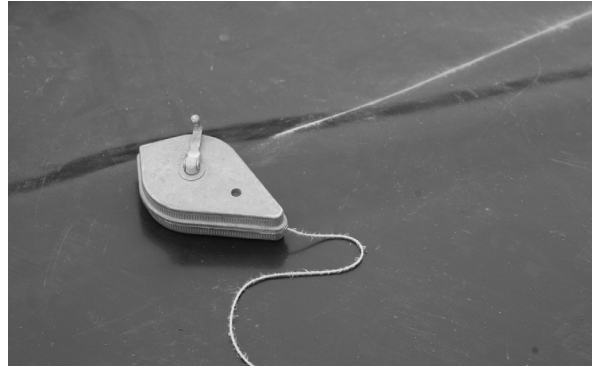

3. As needed, cut edging to length. Wear eye protection and practice safe cutting methods.



Always lubricate blades before cutting.

LiveRoof recommends using a sliding miter saw with a 44-tooth carbide tip.



Cut with the edging face up, the top of the edge facing the saw operator and the base facing away from the operator. This orientation helps keep the edging steady.

4. As needed, form edging into curvilinear shapes.




5. Lay edging with the base facing inwards toward the green roof modules.






- see other side -

6. Join pieces of edging with included sliding connectors.

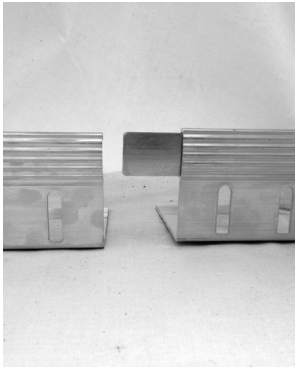


Use 1 connector when linking pieces of Standard (4.25") or Lite (2.75") edging.

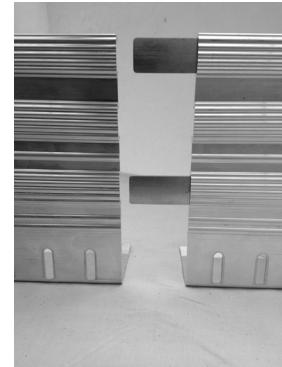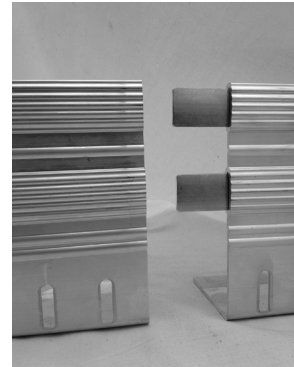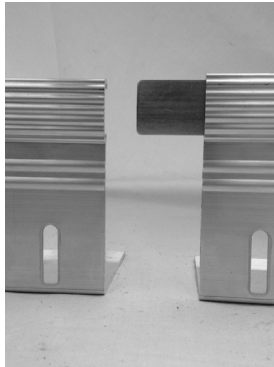


Use 2 connectors when linking pieces of Deep (6.5") or Maxx (8.5") edging.

7. To save time and money, use factory-formed RoofEdge corners.

If forming corners on site, additional tools will be required.

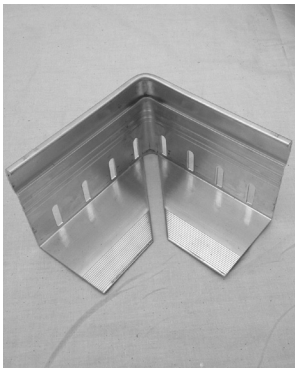

"Base-In"
Corner

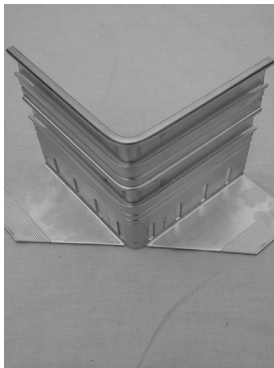

"Base-Out"
Corner

Always bend or weld corners. DO NOT abut two pieces at a corner. The soil may spill and the edging will shift over time.



8. When edging is exposed, fasten to modules with rivet at a spacing of 1' o.c. (not required next to pavers or parapet)



*Blind Rivets:
Wide Domed,
3/16" Diameter for hole size 0.192"-0.196"
(Drill Size #11)
Material thickness range: 0.376" to 0.5",
Length: 0.7"*

*Fastenal # 41030
McMaster-Carr # 97447A075*

